


# IR REMOTE CONTROL GUIDE

## Fixed 4x4 HDMI Matrix Switcher

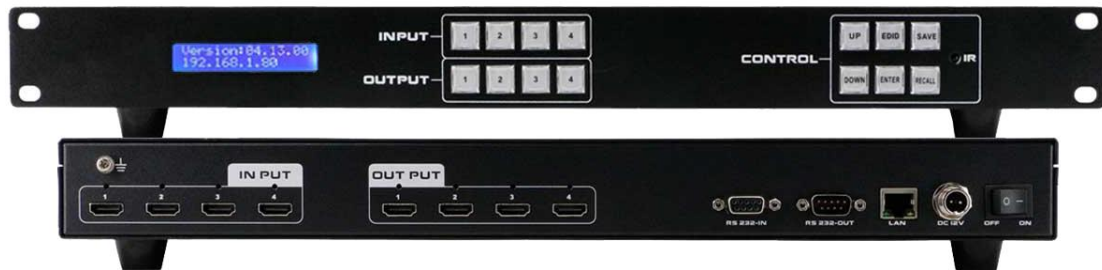

### Inputs Switch to one output or multiple outputs:

Way1: SWITCH ---> number(1~4) ---> SWITCH ---> number(1~4)

**Eg: input 2 to output 1,2,3,4:**

SWITCH ---> 2---> SWITCH ---> 1 ---> 2 ---> 3 ---> 4

Way2: 9---> number(1~4) ---> SWITCH ---> number(1~4)

**Eg: input 2 to output 1,2,3,4:**

9 ---> 2---> SWITCH ---> 1 ---> 2 ---> 3 ---> 4

### Inputs Switch to ALL outputs:

9 ---> number(1~4) ---> ENTER

**Eg: Input 1 to all outputs:**

9 ---> 1 ---> ENTER

### Scene Save:

SAVE ---> number(1~4)

**Eg: Save switching input 1 to output 1,2,3 to scene 2:**

SAVE ---> 2

### Scene Recall :

RECALL ---> number(1~4)

**Eg: Recall scene 2:**

RECALL---> 2

### EDID Setting:

EDID ---> number(1~4) ---> 0(for EDID list up&down) ---> ENTER. (9 is to cancel/return to home page)

**Eg: Set the EDID for input 4:**

EDID ---> 4 ---> 0 ---> ENTER

