


iM44 HDMI Matrix


4x4 HDMI 1.4a Matrix Routing Switcher
Support Button/IR/UART Control
Full EDID Management/Learning

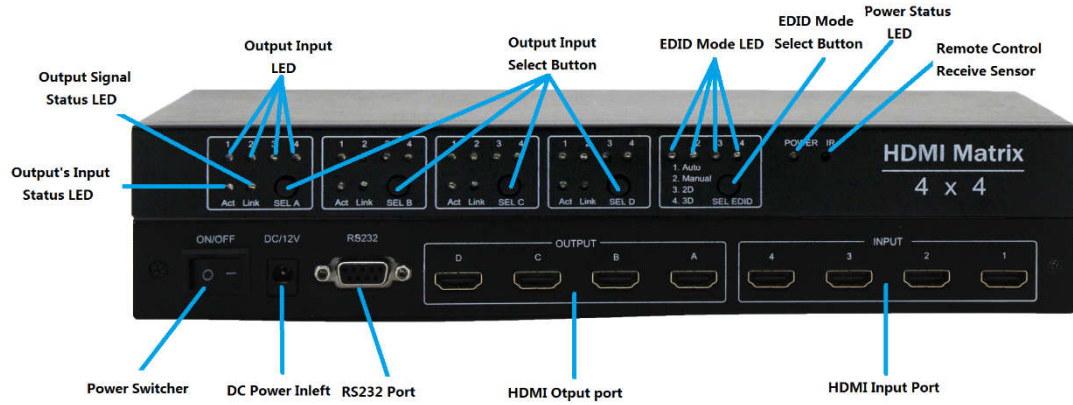

Front Panel/Back Panel



Installing Diagram

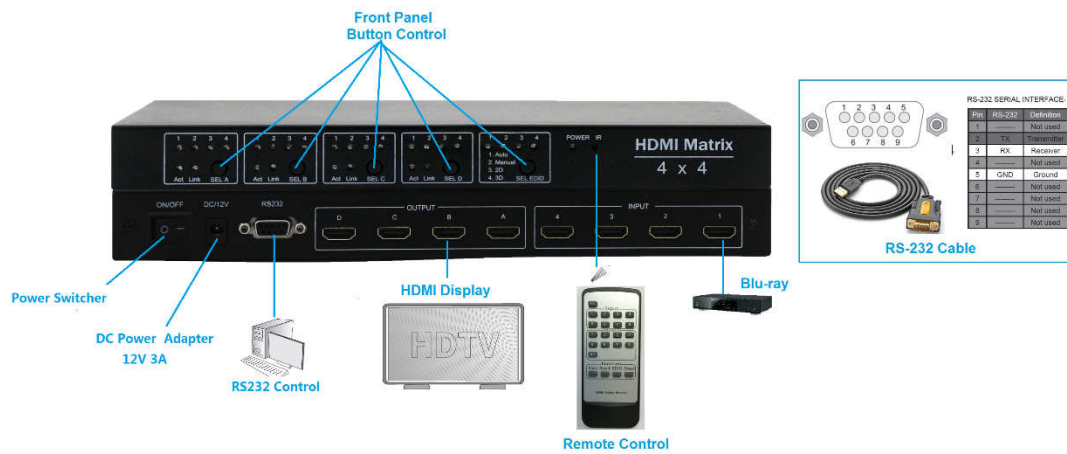

PC RS232 Control Set-up

1. Connect the iM88 and the computer with the RS232 cable;
2. Run the iM88 PC tool, Matrix Mate.exe;
3. Select the "UART";
4. Select the right COM port;
5. Click the button beside the Status to connect;
6. If connected success, will display as the picture show;

